





Sensor Gas Cylinder


- 1) Remove retaining clip at center of star base using a flathead screwdriver and lift base off of support tube to expose gas cylinder.

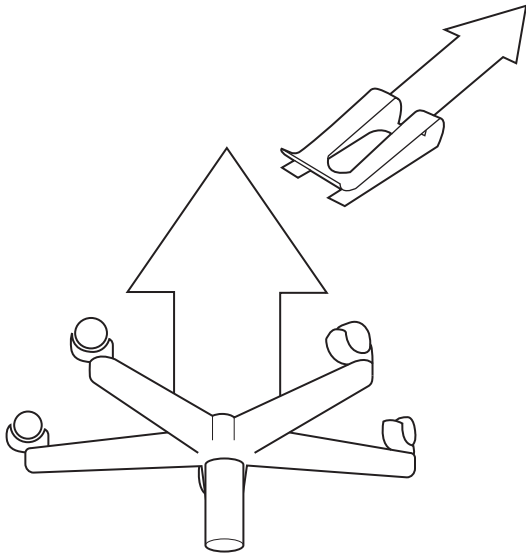


- 3) Using a 3/4" to 7/8" pipe lightly tap new lock ring into place making sure to center the gas cylinder inside of the support tube.

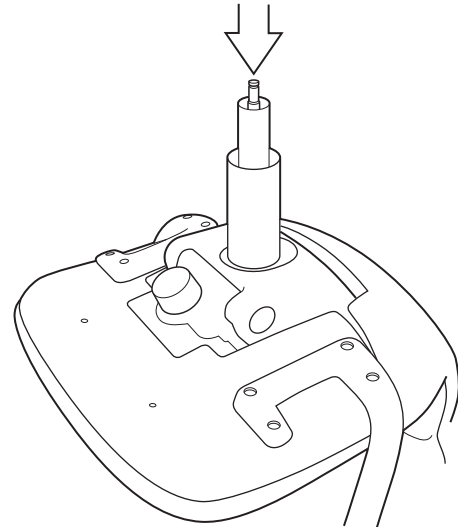

- 2) Using a small flathead screwdriver remove the ring locking cylinder in support tube and pull gas cylinder out of tube.

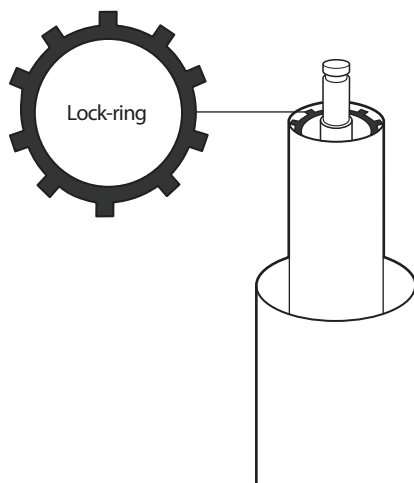

- 4) Place washer, bearing, second washer and rubber washer over end of gas cylinder strut.

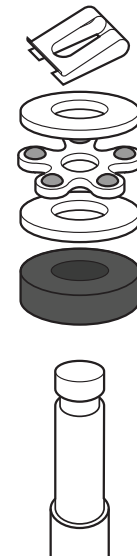

Note: You will not be able to re-use this ring but a new lock-ring is provided in your gas cylinder kit.

- 7) Replace star base and retaining clip. Test the cylinder connections by lifting chair by the seat before using.